


Bergerda Programming Information Step/Dir/Enable with Fault Output

Pn4 = 0 -- Pulse Position Control Mode
Pn95 = 0 -- External Enable on CN1-21 (IN0)
Pn111 = 2 -- Alarm Clear on CN1-9 (IN1)
Pn113..116 = 0 -- Not used setting.

CN1-18 = STEP+, CN1-6 = STEP-
CN1-19 = DIR+, CN1-7 = DIR-
CN1-8 = 16V, CN1-16 = GND
CN1-21 = ENA
CN1-15 = ALARM, CN1-9 ALARM_CLEAR
CN1-3 = 0V-10V DIR.

PWM/Dir/Enable

Pn4 = 7 -- Analog Voltage Control Mode
Pn56 = 0 -- Invert Analog when 1
Pn67 = 25 -- Analog Dead Zone. Stopped below this value.
Pn73 = 3 -- 0V-10V. CIN-3 (IN2) determines direction.
Pn112 = 22 -- Voltage Analog Input Inversion CN1-3 (IN2)

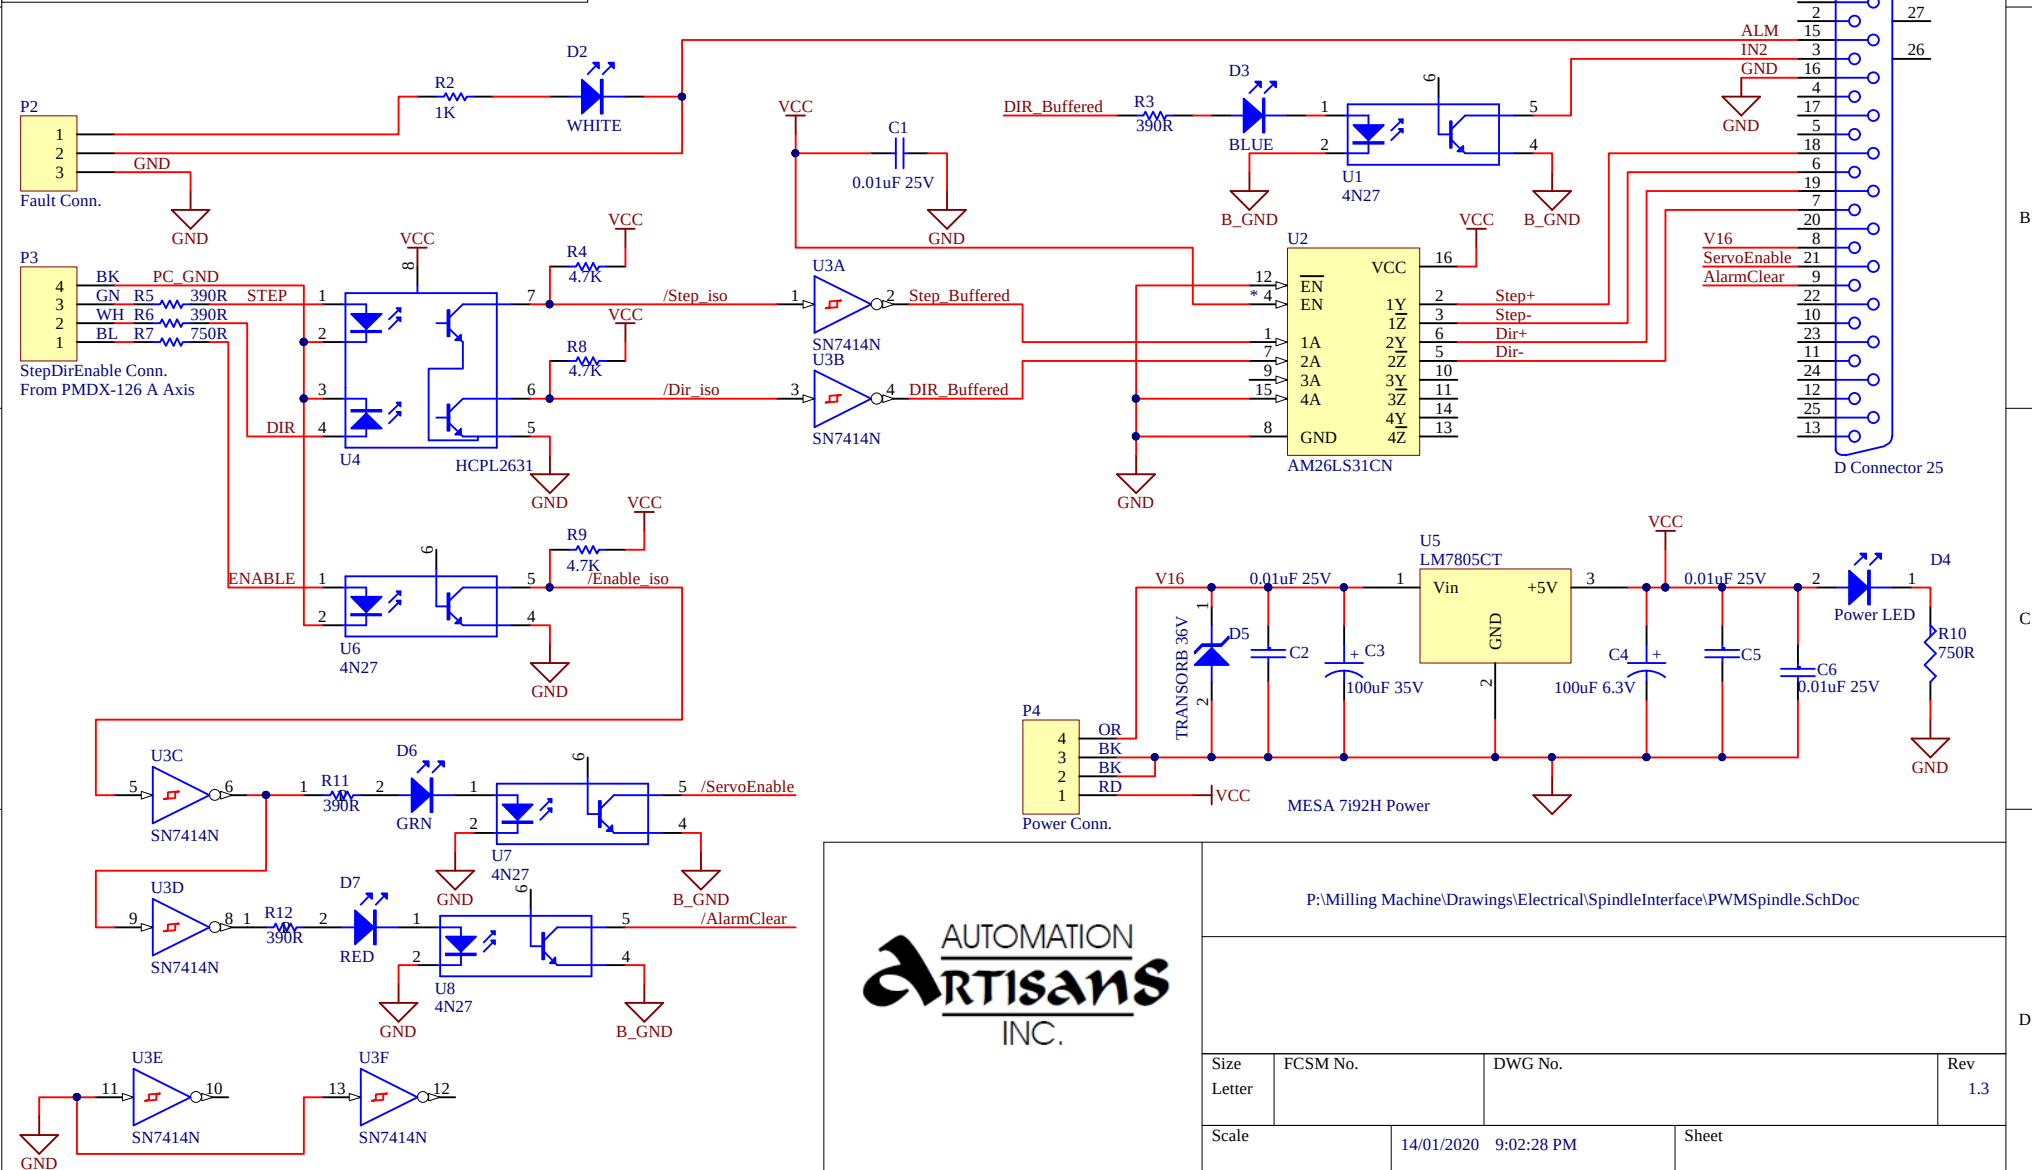

AUTOMATION
ARTISANS
INC.

P:\Milling Machine\Drawings\Electrical\SpindleInterface\PWMSpindle.SchDoc

Size Letter	FCSM No.	DWG No.	Rev 1.3
Scale	14/01/2020 9:02:28 PM	Sheet	